



A Quick Guide on How to Use your MagicSing

ET12K

Step 1 What is inside your MagicSing (ET12K) Easy Carry Bag?

1 Your MagicSing (ET12K) Carry Bag should contain the following items.

BASIC ITEMS



2 If you find any of the items above missing and / or damaged, please contact the store where you purchased the product from immediately.

Step 2 How do you set up your MagicSing?

1 Connect the Mic Cable to your MagicSing.

- Find the white arrow at the end of the cable.
- Align the white arrow with the arrow right at the top of the cable jack terminal found at the back (bottom part) of the microphone.
- Carefully insert the jack of the cable into the jack terminal until you hear a click sound to ensure that they are properly connected.
- To disconnect, carefully slide down the tab of the mic cable and pull it out from the MagicSing cable jack terminal.



2 Connect the AV (Audio / Video) Cable to the RCA jack terminal on your TV (found either on the sides or at the rear of your TV) in the following manner :

- Red jack to the red terminal
- Yellow jack to the yellow terminal
- White jack to the white terminal

- If there are only two RCA jack terminals on your TV (Mono TV), connect the yellow jack into the yellow RCA jack terminal and connect the white jack into the other RCA jack on your TV.



3 Connect the Male AC Adaptor Jack into the Female AV Cable terminal (black). Plug the other end of the AC Adaptor to the main power supply.



4 In the absence of power supply, you can still operate your MagicSing by inserting two AA alkaline batteries into the battery compartment found at the back of the microphone.



Caution : Do not use batteries and the power adaptor simultaneously. It will cause battery leakage that will damage your MagicSing microphone.

5 Turn your TV on and set it in the Video Mode.



- For a more advanced set up for your MagicSing, please refer to Chapter.02 of the User's Manual found in your MagicSing Handbook.

Step 3 How do you start using your MagicSing?


1 Turn the MagicSing microphone power on by briefly pressing [ON]. The word "P-On" appears on the microphone's LCD display screen, and the MagicSing display screen appears on your TV screen.



2 To select a song using your MagicSing microphone, wait for the word "SEL" to appear on the microphone's LCD display screen and the words "Select a Song" to appear on your TV screen, and then press [V], [A] or [SEARCH]. When the Song List appears on your TV screen, continuously press either [V] or [A], and then you will notice a blue bar highlighting each song title on the list. If you wish to play the song highlighted by the blue bar, press [P/■].



3 You can also select a song by browsing through the pages of the Songlist in the MagicSing Handbook. To play your selected song, just key in the numbers found beside the song title onto your MagicSing microphone and then press [P/■]. To enjoy more advanced features of your MagicSing, please refer to the User's Manual found in the MagicSing Handbook.

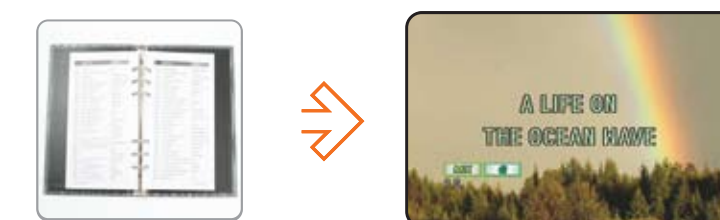

Q&A What should you do if you encounter the following problems?

Q I cannot turn my MagicSing on.

A

1. Check if the female (black) jack of the mic cable and the male AC adaptor are properly connected.
2. Make sure that the AC adaptor is properly plugged into the main power outlet. (Please refer to "Step 2. How do you set up your MagicSing?")

Q I cannot see anything or hear any sound on my TV.

A

1. Make sure that your TV is in the Video Mode.
2. Make sure all the cables and the adaptor are properly connected. (Refer to "Step 2. How do you set up your MagicSing")

Q There is no sound coming from the mic.

A

1. Check the microphone's volume level by pressing [VOL], and then press [A] to increase the sound.
2. If your MagicSing is operated by batteries, make sure that the batteries are correctly inserted. Also, check the battery life. If it is low, your MagicSing microphone may not function properly or may not function at all.

Q The MagicSing display screen has frozen or has disappeared from the TV screen.

A Turn the MagicSing microphone off, and then turn it back on.

Note : For other problems, please refer to the topic "Troubleshooting" on Chapter. 05 of the User's Manual found in the MagicSing Handbook.

ENTER-TECH CO.,LTD.

Enter B/D, 156-7, Ojeong-dong, Ojeong-gu, Bucheon-City, Kyunggi-do, Korea (421-814) TEL : +82-32-673-1671 / +82-2-2605-0884 | FAX : +82-2-2691-5354 | E-MAIL : enter@enter-tech.com | Designed by ENTER-TECH KOREA | Printed in China VER.200