

MAGIC SING

A Quick Guide on How to Use your MagicSing

Step 1 What is inside your MagicSing (ET19KV) Easy Carry Bag?



1 Your MagicSing (ET19KV) Easy Carry Bag should contain the following items.

BASIC ITEMS



Carry Bag Main Station Wireless Karaoke AV Cable (RCA) AC Adaptor (DC 9V/1A) Karaoke Handbook (Song list & User's Manual) Remote Control USB Cable Video Cable USB Installation CD Battery SD card

2 If you find any of the items above missing and or damaged, please contact the store where you purchased the product from immediately.

Step 2 How do you set up your MagicSing (ET19KV)?

1 Connect the jack of the AC Adaptor to the jack terminal (found at the rear) on your MagicSing Main Station and plug the other end of the AC Adaptor to the main power supply.



2 Connect the AV Cable into your TV's RCA jack terminal (found either on the sides or at the rear of your TV) in the following manner :
- Red jack to the red terminal
- Yellow jack to the yellow terminal
- White jack to the white terminal



3 Turn your TV on and set it in the Video Mode.

• Please turn off the function "Automatic Volume Levelling" (AVL / AVC) on your television set.



4 Open your MagicSing battery compartment (found at the back of the microphone) and insert two AA batteries properly.



Step 3 How do you start your MagicSing (ET19KV)?

1 Turn the MagicSing Main Station on (found on the right side). The MagicSing Display Screen will appear on your TV screen.



2 Turn the MagicSing Wireless Microphone on by pressing the power button for 3 seconds. A green light indicates that it is turned on.



3 To operate your MagicSing using the Remote Control, open the battery compartment (found at the back) and insert two AAA batteries.




Step 4 How do you start using your MagicSing (ET19KV)?

1 Select a song by using your Wireless Microphone. Press [▼] [▲], and the Song list will appear on your screen. By continuously pressing either [▼] or [▲], each song title on the list will be highlighted by a blue bar. If you wish to play the highlighted song, just press [▶/■].



2-1 Select a song by using the Remote control. Press [▼] [▲] on the remote control, and the Song list will appear on your screen. By continuously pressing either [▼] or [▲], each song title on the list will be highlighted by a blue bar. If you wish to play the highlighted song, just press [SELECT] or [▶/■] on the remote control.

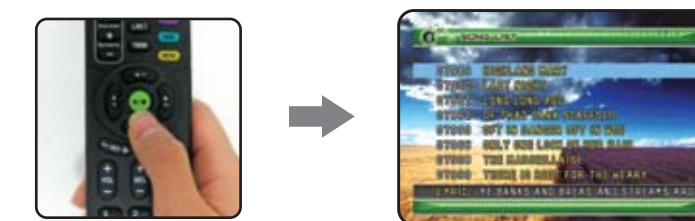

2-2 To enjoy more advanced features of the ET19KV, please refer to the User's Manual found in the MagicSing Handbook.

3 Select a song from the Song list in the Handbook, and then key in the number found beside the title of the song you selected onto your wireless microphone. Press [▶/■] to play the song.



- You can do the same procedure on the Remote control. Just press [▶/■] after you key in the song number.

Q&A What do you do if you have the following problems?

Q I cannot turn my MagicSing on.

A Check the Main Station and make sure the AC adaptor is properly connected.

Q I cannot see anything or hear any sound on my TV.

A 1. Make sure that your TV is in the Video Mode.
2. Make sure the adaptor and the cables are properly connected. (Refer to "Step 2. How do you set up your MagicSing (ET19KV)?")

Q There is no sound coming from the mic.

A 1. Make sure that the wireless microphone has two AA batteries. Note : Check the battery life. If it is low, MagicSing may not function properly or may not function at all.
2. Check the microphone volume by pressing [VOL] and then press [▼] [▲] to increase or decrease the volume.

Q The MagicSing Display Screen has frozen or has disappeared from the TV screen.

A Turn the Main Station off, and then turn it back on.

Q The green light on the microphone is blinking, and the microphone does not seem to work either.

A Try to bring the microphone closer to the main station. Avoid any obstacles between the microphone and the main station such as walls, furniture, fixtures, and other items.

ENTER-TECH CO.,LTD.

Enter B/D, 156-7, Ojeong-dong, Ojeong-gu, Bucheon-City, Kyunggi-do, Korea (421-814) TEL : +82-32-673-1671 / +82-2-2605-0884 | FAX : +82-2-2691-5354 | E-MAIL : enter@enter-tech.com | Designed by ENTER-TECH KOREA | Printed in China VER.100